



MASSACHUSETTS

122 Pembroke Street, P.O. Box A, Kingston, MA 02364
(781) 585-4364

Fax (781) 585-9375

CALIFORNIA

845 Milliken Avenue, Suite F, Ontario, CA 91761
(909) 390-5465

Fax (909) 390-5470

**Replacing Grid Deflecting Device Assembly (C) on
Econom, Standard, Optisaw 1, Optisaw I Plus, Optisaw II, Standard
TRK machines**

With saw head horizontal:

1. Unhook thinner spring #56 from carriage safety brake bolt #21.
2. Back off Allen head set screw just below bolt #20 holding top of hollow rod with 3mm Allen wrench.

With saw head vertical:

3. Remove black connecting rod #53 by snapping ball ends out of joints.
4. Slide the hollow shaft #55 out the bottom of the casting.
A screwdriver inside the shaft may help to get it out.
5. Remove the large black plastic deflector #54.
6. Remove the plated track #50 by removing two Phillips screws.
7. Replace the assembly in reverse order; make sure the hole in the hollow rod lines up with the hole in the plastic deflector.

Note: Your parts books may have different drawings and part numbers, but the parts are the same.

Motorlaufwagen

