


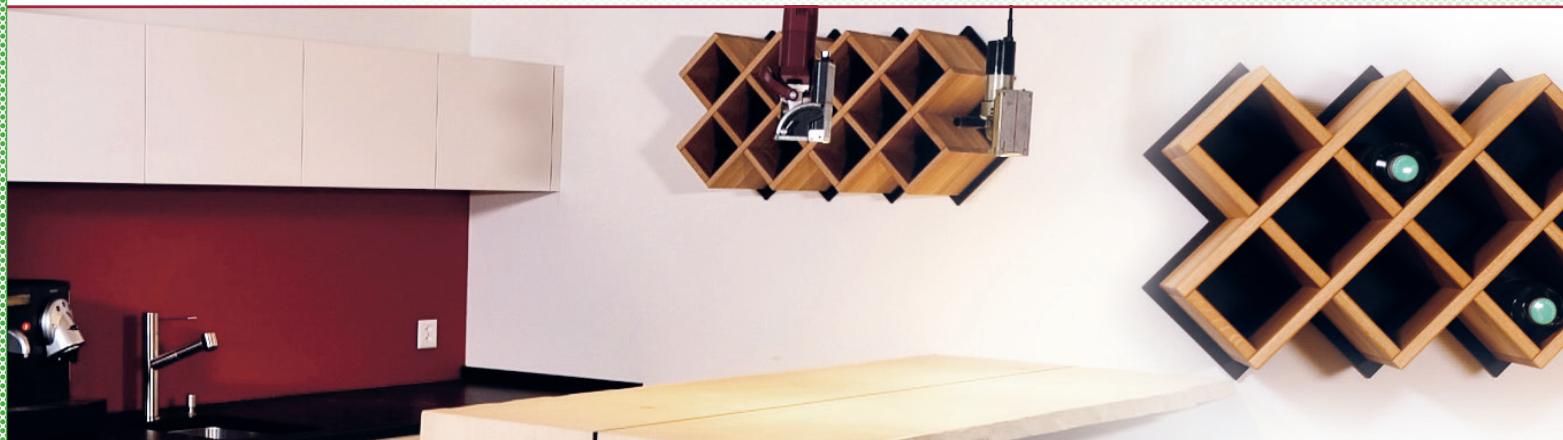

Tips tricks

Dividing panel joints from 19 mm with Tenso P-14



Would you like to connect dividing panel joints invisibly to one another? The offset installation of the Tenso P-14 allows glued joints from a material thickness of 19 mm to be realised in almost no time.

How it works:



Use a template with uniform spacing instead of marking repeatedly.



Clamp the template on the dividing panel as a stop.



Perform milling on the surface on both sides with depth setting 10.



Mill the P-System groove on the front side with depth setting 18.



Insert the Tenso P-14 element into the P-10 grooves.



Insert the Tenso P-14 element into the P-18 groove.



Preload the Tenso P-14 to facilitate assembly.



Apply glue.



Connect – finished!