




# Tipps Tricks

## Invisible, self-clamping push-in fasteners



### Installation options

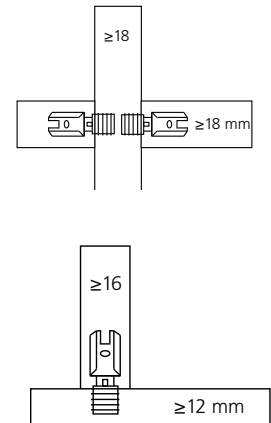

Inserting and clamping Tablar floors and partition walls in a finished and joined body **without visible connecting elements.**

### How it works:



1. Locate the angle stop



2. Mill a longitudinal groove



3. Mill a P system groove



4. Push in the connectors



5. Tap in the fastening pins



6. Mark the drill holes



7. Drill holes



8. Tap in the bolt part




9. Push in the workpieces

# More options

Alternatively, drill Ø 8 x 32 mm holes using


CNC	Blum Minipress	Mafell DuoDübler
		

## Your advantages with the Divario P-18

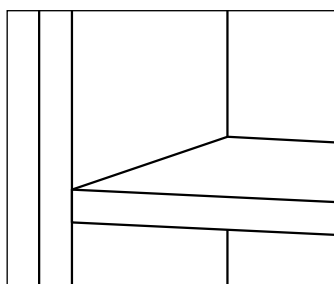

### Invisible

Guiding groove covers the fittings

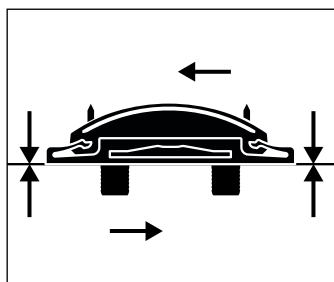

### Clamped joint

No resistance while inserting until shortly before building the clamping force

## Divario P-18

Self-clamping, invisible fitting for slide insertion



Divario P-18	Art.No.
Starterset with 80 pairs incl. installation tool.....	145505
Carton with 80 pairs .....	145550
Carton with 300 pairs .....	145560
Carton with 1000 pairs .....	145570

Divario P-18 Installation tool	Art.No.
for fixing the Divario in the workpiece .....	125500

Divario P-18 Marking jig	Art.No.
incl. drill with centering point and rotating depth collar for the precise drilling of Divario drill holes by hand.....	125510



Manufacturer:  
**Lamello AG**  
**Joining technology**  
 Hauptstrasse 149  
 CH-4416 Bubendorf  
 Tel. +41 61 935 36 36  
 Fax +41 61 935 36 06  
 info@lamello.com  
 www.lamello.com