



Is the 6 mm access hole too noticeable or too inaccessible? Then drill the hole into the edge instead of the surface. This way you can fix fillers or covers invisibly while they still remaining detachable.

How it works:



Cut P-System grooves at a 20 mm offset with the stop square




Fit the filler until it lines up with the marking




Drill a 6 mm access hole in to the edge using the P-System drill jig



Insert Clamex P connector

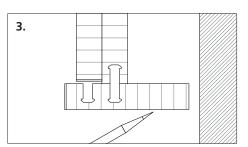

Assemble the joint in offset position with a Bisco and mark.

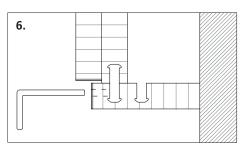

Insert the filler and join with Clamex P



Form-locking anchorage without tools







Tips 🎬 tricks

Clamex P

Detachable connecting fitting






Detachable

High clamping force


Stackable

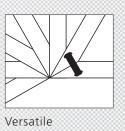

Tenso P

with preload clip, self-clamping fitting as glueing aid, for all angles

Aesthetic




Glueing





High clamping force




Versatile

Lower assembly force


Divario P


Self-clamping, invisible fitting for slide insertion

Invisible



Sliding insertion

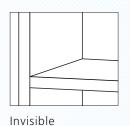




Clamped joint



Fast installation





Assemble by sliding



Manufacturer: Lamello AG Joining technology Hauptstrasse 149 CH-4416 Bubendorf Tel. +41 61 935 36 36 Fax +41 61 935 36 06 info@lamello.com www.lamello.com